



Right Side View  
of Compartment

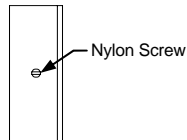


1. Using the supplied 3mm and 4mm Screws, attach the Compartment to the Anton/Bauer® Wireless Receiver Plate. The Compartment will fit all Anton/Bauer Plates.
2. To "Piggy-Back" more than one Compartment, simply follow the instructions in Step #1 and stack the Compartments together.
3. A Nylon Screw is included in the package with the Screws and can be screwed into the side of the Compartment for additional support.

### Installation of Foam Bumper Strips


Foam Bumper Strips should be installed for added protection and a better fit.




Left Side View

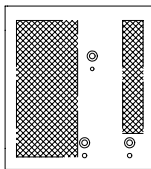

Front View




Right Side View



Bottom View  
(201)\*



Bottom View  
(185/200)

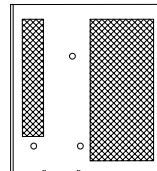

Rear View

\*Foam for the WRB-201 Bottom must be cut into two pieces then applied.

**Anton/Bauer**® Available Separately

## **ABWMK-KIT** **Universal Mounting Plate for Wireless Receivers**

- Allows user to use the same Wireless Receiver Plate for ALL Anton/Bauer Batteries.
- Allows a Receiver to be mounted on either the side of the Battery, behind the Battery, or both.
- Will accommodate WRB-185/ WRB-200/ WRB-201 Wireless Receiver Compartments.

